

ATTENTION: READ ALL INSTALLATION AND SAFETY PROCEDURES BEFORE USING THIS PRODUCT. RETAIN FOR FUTURE PREFERENCE.

OMEGA RAIL SYSTEM INSTALLATION PROCEDURES

- LOOSEN BOTH BACK BAR RETAINER NUTS ON EACH SIDE OF OMEGA ASSEMBLY (DO NOT REMOVE NUTS)
- PIVOT FLANGE NUT AND STUD OUT OF SLOT
- ALLOW BACK BAR TO HANG DOWN VERTICAL
- OPEN OMEGA ASSEMBLY AND INSTALL AROUND FACE OF RAIL
- SWING BACK BAR HORIZONTAL AROUND BACK FLANGE OF OMEGA RAIL AND PIVOT INTO SLOT
- TIGHTEN NUTS EVENLY TO HOLD OMEGA ASSEMBLY IN PLACE
- LEVEL OMEGA ASSEMBLYS RAIL TO RAIL
- DRILL 2 HOLES (1/2") THROUGH TOP HOLE GUIDES WITH OMEGA ASSEMBLY IN PLACE
- THROUGH BOLT WITH 2 (1/2") GRADE 8 BOLTS AND NUTS THROUGH BACK FLANGE OF OMEGA RAIL
- INSTALL RATED LIFTING BEAM WITH BEAM CLAMP WHEN HOISTING PROCEDURES ARE PERFORMED
- BE SURE ALL BEAM HOLD DOWNS ARE TIGHT WHEN PERFORMING LIFTING PROCEDURES
- CENTER BOTTOM LIFTING SHACKLE ON LIFTING PIN WHEN LIFTING PROCEDURES ARE PERFORMED FROM SHACKLE
- NOT INTENDED FOR COUNTER-WEIGHT OMEGA RAIL APPLICATIONS AS RAIL CONSISTS OF SMALLER & THINNER CONSTRUCTION & RAIL FAILURE CAN OCCUR
-

Any questions, please call Advance Welding Service, Inc. at: (815) 568-9700

Revision: #01 07/29/2021

ATTENTION: READ ALL INSTALLATION AND SAFETY PROCEDURES BEFORE USING THIS PRODUCT. RETAIN FOR FUTURE REFERENCE.

PRECAUTIONS:

AS WITH ANY LIFTING DEVICE, EXTREME CAUTION IS NECESSARY WHEN LIFTING PROCEDURES ARE PERFORMED. MISUSE OR NEGLIGENCE OF THIS PRODUCT CAN RESULT IN INJURY OR DEATH. BE SURE TO READ ALL PRECAUTIONS AND INSTRUCTIONS PRIOR TO USE.

- DO NOT EXCEED LIFTING CAPACITY
- ALWAYS LIFT VERTICAL FROM BOTTOM LIFTING SHACKLE. RAIL FAILURE CAN OCCUR
- CENTER BOTTOM LIFTING SHACKLE ON LIFTING PIN WHEN LIFTING PROCEDURES ARE PERFORMED FROM SHACKLE
- ALWAYS USE GRADE 8 HARDWARE
- MAKE SURE ALL HARDWARE IS TIGHT BEFORE ANY LIFTING PROCEDURES ARE PERFORMED
- ALWAYS USE CAUTION DURING LIFTING PROCEDURES
- VISUALLY INSPECT ASSEMBLY AFTER EACH USE. ANY SIGNS OF DAMAGE OR FATIGUE- **REPAIR IMMEDIATELY**

Any questions, please call Advance Welding Service, Inc. at: (815) 568-9700

Warranty & Liability Disclaimer

Warranty will only cover material and/or workmanship for a period of one year. Advance Welding Service Inc. will repair and/or replace any defective item during the one year warranty period. Advance Welding Service Inc. has the right to determine whether or not the warranty is due to improper use of product and/or improper application for which the product is intended for. The user assumes all liabilities and/or risks in connection with the use of this product. In no event shall Advance Welding Service Inc. be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, whatsoever arising out of or connected with the use or misuse of its products. Advance Welding Service Inc. shall not be liable for any unauthorized claims or representations made by purchaser nor for any damages resulting from such claims or representations. Advance Welding Service Inc. liability in all events is limited to, & shall not exceed the purchase price paid for the product that gives rise to any liability. User assumes all risks & liabilities in connection with the use for which this product is intended for.

Any questions, please call Advance Welding Service, Inc. at: (815) 568-9700

Revision: #01 07/29/2021